Military TA-50 & Military Combination Storage Cabinets – 7150/7155


Installation Instructions

Thank you for selecting Salsbury's military storage cabinets. We are confident that the quality and construction of the cabinets will prove to be a good investment.

Due to the weight of these cabinets, it is recommended that you have a forklift or other heavy-lift device available to move them into the final installation position.

CAUTION: Due to the heavy weight of the cabinets, it is highly recommended that they be securely anchored to the floor and/or wall.

No assembly is needed as the storage cabinets are of fully welded construction. The cabinets should be placed in the installation location and anchored to the floor, wall, or to both. Installation fasteners are not provided, as individual job conditions will dictate the type of anchor fasteners that should be used. The anchor fasteners chosen should be appropriately sized for the heavy weight of the cabinets.

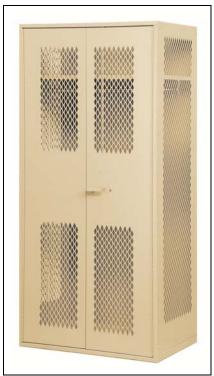

7150 Military TA-50 Shown

SALSBURY INDUSTRIES